

Carron Phoenix Alba Tap

Replacing Cartridges & O Rings

Replacing the cartridge

Before replacing the cartridge you will need to turn the water off. You will first need to remove the handle indicator (1) by prising it off. You can then remove the handle retaining screw (2) by using a crosshead screwdriver. Once this is removed, you can then remove the handle (3) and unscrew the cartridge (4) by using an adjustable spanner. You will then be able to fit the replacement parts.

Replacing the o rings

To replace the o rings you'll need to unscrew the spout collar (5) by unscrewing it anticlockwise. You will then be able to lift the spout (6) out and replace the o rings (7) at the base with the new parts.

