

Franke DVG Divida Tap


Replacing Cartridge and O-Rings

Replacing the cartridge

Before replacing the cartridge, you will need to turn the water off. You will need to unscrew the indicator (1) which then gives you access to the handle retaining screw (2). You will need a cross head screwdriver to remove this screw. Once this is removed, you can pull the handle (3) off and then unscrew the valve cover by unscrewing it anticlockwise. You can then unscrew the valve (4) by using an adjustable spanner. You will then be able to fit the replacement valves.

Replacing the o rings

To replace the o rings, you will need to unscrew the collar (5) at the base of the spout (6). Once this is unscrewed you can lift the spout out of the body and replace the o rings (7) at the base.

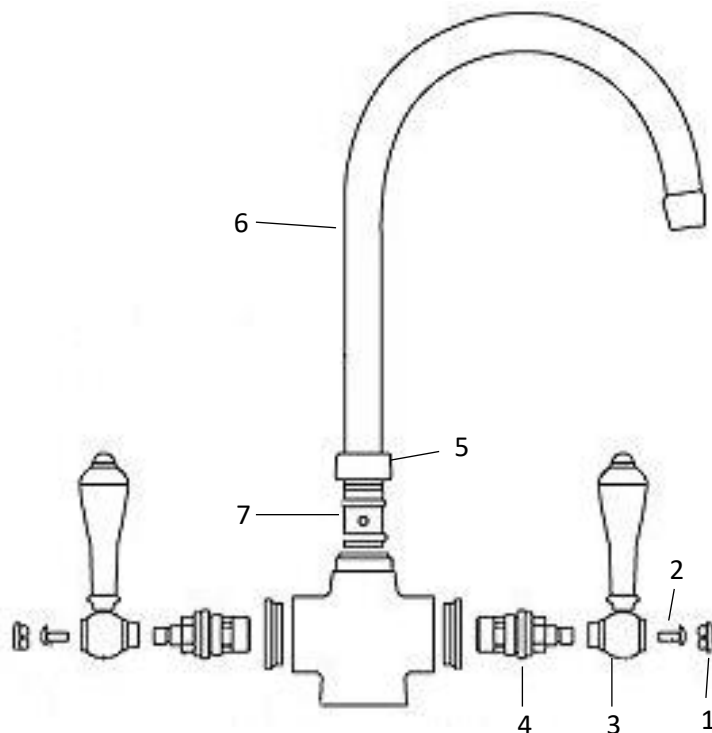

Central Services Ltd
Unit 17 Park Hall Business Village
Park Hall Road
Stoke-on-Trent
ST3 5XA

01782 599258
ks-ukcentralservices.gb@franke.com

*Make
it
Wonderful*

FRANKE