

Carron Phoenix Dante Tripure Tap

Replacing Cartridges & O-Rings

Replacing the Cartridge

Before replacing the cartridge, you will need to turn the water off. You will first need to unscrew the handle retaining screw (1) by using a 2mm allen key. You can then remove the handle (2) and then unscrew the valve cover (3) by unscrewing it anticlockwise. You can then unscrew the existing valve (4) with an adjustable spanner and fit the replacement parts.

Replacing the O-Rings

You will first need to unscrew the spout retaining screw (5) by using a 2.5mm allen key. You can then lift the spout (6) out and replace the existing o rings (7) with the new parts.

