

# Franke Davos J Tap

## Replacing Cartridge and O-Rings

### Replacing the cartridge

Before replacing the valves, you will need to turn the water off. You will need to remove the handle indicator (1) and then unscrew the handle retaining screw (2). This will then allow you to remove the handle (3). You can then use an adjustable spanner to unscrew the existing valve (4) and fit the replacement.

### Replacing the o rings

To replace the o rings, you will need to remove the spout retaining screw (5) by using a 2.5mm allen key. You will then be able to remove the spout (6) and replace the existing o rings (7) with the replacements.

