

# Franke Davos L Tap

## Replacing Cartridge and O-Rings

### Replacing the cartridge

Before replacing the valves, you will need to turn the water off. You will need to remove the handle indicator (1) and then unscrew the handle retaining screw (2). This will then allow you to remove the handle (3). You can then use an adjustable spanner to unscrew the existing valve (4) and fit the replacement.

### Replacing the o rings

To replace the o rings, you will need to unscrew the collar (5) by unscrewing it anticlockwise. Once this is undone, you can then remove the spout (6) and replace the o rings (7) with the replacements.

