

Franke Eos Neo Tap


Replacing Cartridges & O Rings

Replacing the cartridge

To replace the cartridge you will first need to turn the water off to the tap. You will need to remove the handle retaining screw (1) by using a 2.5mm allen key. You can then remove the handle (2) and unscrew the cartridge cover (3) by unscrewing it anticlockwise. You will then need an adjustable spanner to unscrew the cartridge locking ring (4). You can then remove the cartridge (5) and replace with the replacement parts.

Replacing the o rings

To replace the o rings you'll need to remove the spout retaining screw (6) by using a 2mm allen key. You can then lift the spout (7) up and replace the o rings (8) at the base with the replacement parts.

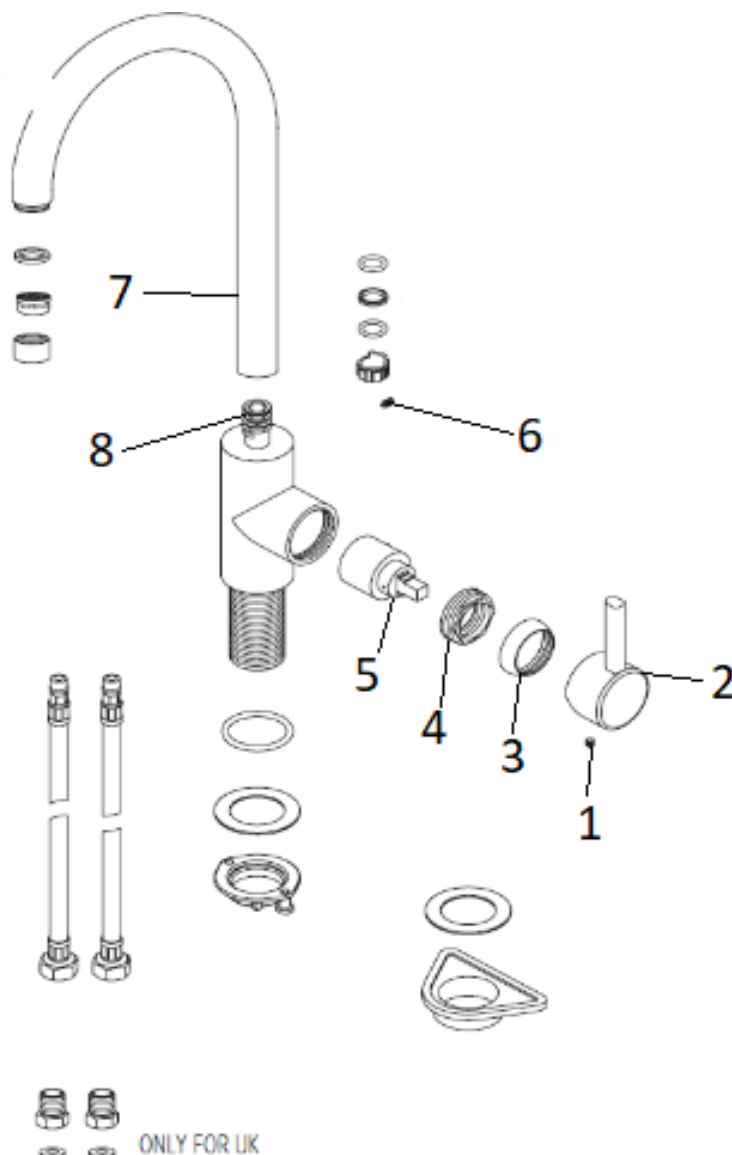

Central Services Ltd
Unit 17 Park Hall Business Village
Park Hall Road
Stoke-on-Trent
ST3 5XA

01782 599258
ks-ukcentralservices.gb@franke.com

*Make
it
Wonderful*

FRANKE