

Franke Larino Filter Tap

Replacing Cartridge and O-Rings

Replacing the cartridge

Before replacing the cartridge, you will need to turn the water off. You will need to remove the handle retaining screw (1) by using a 2mm allen key. You will then be able to remove the handle (2) and unscrew the valve cover (3) by unscrewing it anticlockwise. You will then be able to use an adjustable spanner to unscrew the existing valve (4) and fit the replacement parts.

Replacing the o rings

To replace the o rings you will need to unscrew the spout retaining screw (5) by using a 2.5mm allen key. Once the spout (6) has been lifted out, you can replace the o rings (7) at the base with the replacement parts.

