

# Franke Luzern Tap


## Replacing Cartridge and O-Rings

### Replacing the cartridge

Before replacing the cartridge, you will need to turn the water off. You will need to remove the indicator (1). You can then remove the handle retaining screw (2) by using a crosshead screwdriver. Once you've removed the handle (3), you'll be able to unscrew the existing valve (4) and replace with the new parts.

### Replacing the o rings

To replace the o rings, you will need to turn the spout (5) so that it's directly over the hot handle and then lift it out. You can then replace the o rings (6) on the base with the new parts.

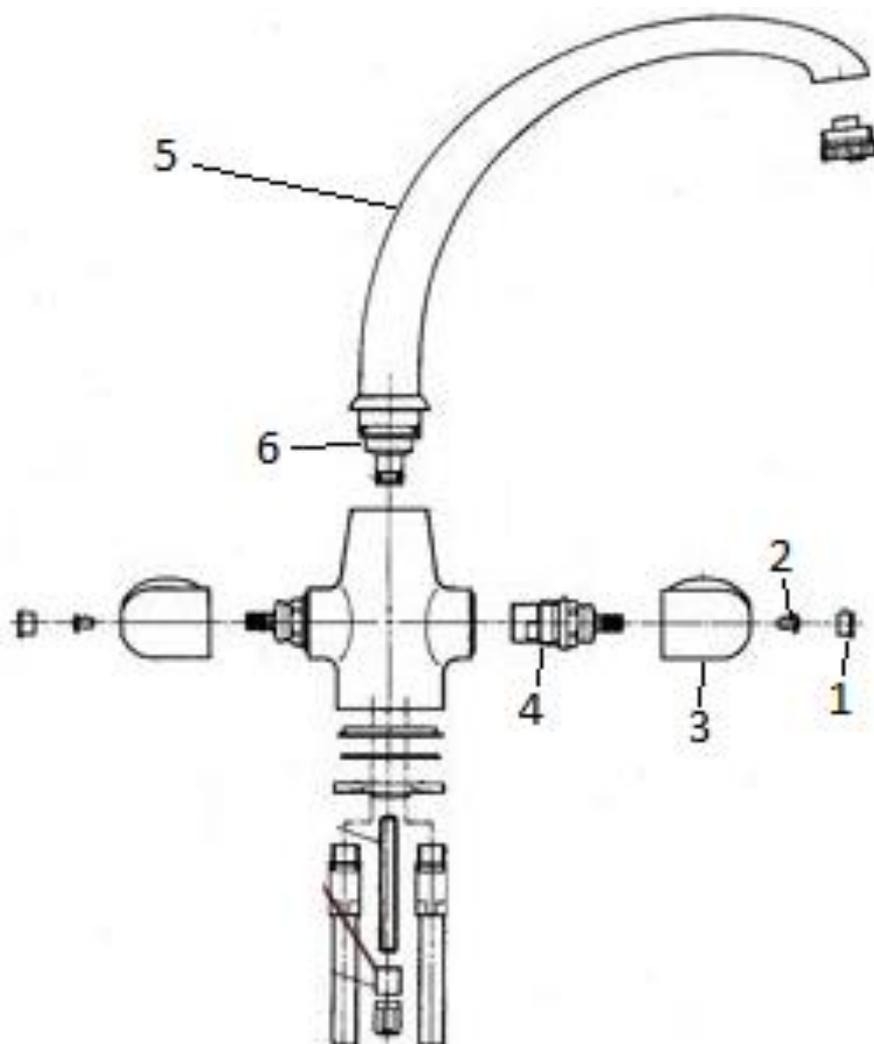

Central Services Ltd  
Unit 17 Park Hall Business Village  
Park Hall Road  
Stoke-on-Trent  
ST3 5XA

01782 599258  
[ks-ukcentralservices.gb@franke.com](mailto:ks-ukcentralservices.gb@franke.com)

*Make  
it  
Wonderful*

**FRANKE**