
Franke Professional Cruciform Tap Replacing Cartridge & O-Rings

Replacing the cartridge

Before you start you'll need to turn the water off to the tap. You'll need to remove the indicator from the handle (1) and then remove the handle screw (2) by using a crosshead screwdriver. Once you've removed the handle (3), you can use an adjustable spanner to unscrew the valve (4). You'll then be able to fit the replacement valves.

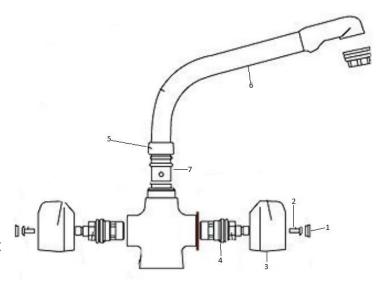

Replacing the o rings

You'll need to unscrew the collar (5) at the base of the spout (6) by unscrewing it anticlockwise. Once the collar is completely unscrewed, you can pull the spout out. You'll then be able to remove the existing o rings (7) and replace with the replacement parts.

Central Services Ltd Unit 17 Park Hall Business Village Park Hall Road Stoke-on-Trent ST3 5XA 01782 599258 ks-ukcentralservices.gb@franke.com



