

Franke Rialto Tap

Replacing Cartridge & O-Rings

Replacing the cartridge

Before replacing the cartridge, you will need to turn the water off. You will need to remove the handle indicator (1) by unscrewing it anticlockwise. Once this is removed, you'll be able to remove the handle retaining screw (2) with a crosshead screwdriver. This will then allow you to remove the handle (3). You can then unscrew the valve cover (4) by unscrewing it anticlockwise. You'll then be able to unscrew the valve (5) by using an adjustable spanner. You can then fit the replacement parts.

Replacing the o rings

You will need to unscrew the collar (6) at the base of the spout (7). Once this is unscrewed, you'll be able to pull the spout out of the body. You'll then be able to remove the existing o rings (8) and fit the replacement parts.

