Franke Aria Tap
Replacing Cartridge and O-Rings

Replacing the Cartridge

Before replacing the cartridge, you will need to turn the water off. You will then need to remove the handle screw (1) by using a 2.5mm allen key. You will then need to remove the cartridge locking ring (3) by using an adjustable spanner. You will then be able to remove the cartridge (3) and replacing with the new part.

Replacing the O-Rings

To replace the o rings, you will first need to remove the hose. To do this, unscrew the hose from underneath the tap and pull through from the end of the spout.

To replace the o rings you will need to pull the spout (4) straight up which then reveals the o rings (5). You can then replace these with the replacement o rings you've received.

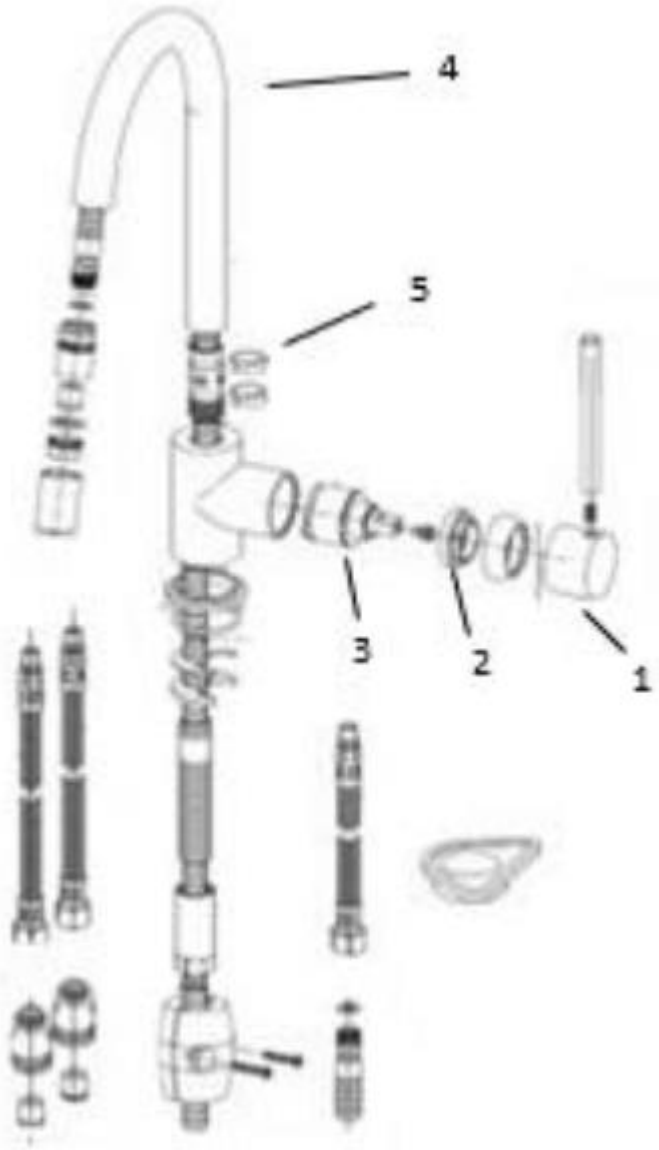

Central Services Ltd
Unit 17 Park Hall Business Village
Park Hall Road
Stoke-on-Trent
ST3 5XA

01782 599258
ks-ukcentralservices.gb@franke.com

Make it Wonderful

FRANKE