Carron Phoenix Aztec Tap
Replacing Cartridges & O Rings

Replacing the Cartridge

Before replacing the cartridge, you will need to turn the water off. You will first need to remove the handle indicator (1) by prising this off. You will then need to remove the handle retaining screw (2) by using a crosshead screwdriver. You can then remove the handle (3). You will then need an adjustable spanner to remove the existing valve (4) and fit the replacement parts.

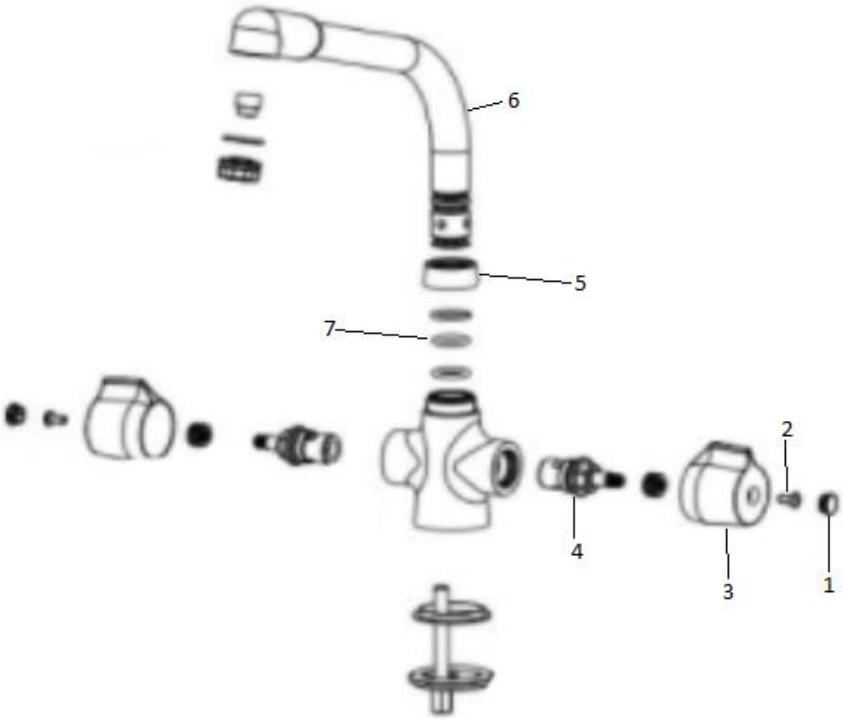

Replacing the O-Rings

You will first need to unscrew the spout collar (5) and lift the spout out (6). You can then replace the o rings (7) with the replacement parts.

Central Services Ltd
Unit 17 Park Hall Business Village
Park Hall Road
Stoke-on-Trent
ST3 5XA

01782 599258
ks-ukcentralservices.gb@franke.com

CARRON PHOENIX