Carron Phoenix Lanark Tap
Replacing Cartridges & O-Rings

Replacing the Cartridge

Before replacing the cartridge, you will need to turn the water off. You will need to remove the handle retaining screw (1) by using a 2mm allen key. Once the screw is removed, you can remove the handle (2). You can then unscrew the cartridge cover (3) by unscrewing it anticlockwise. You will then need an adjustable spanner to remove the cartridge locking ring (4). Once this is undone, you can remove the cartridge (5) and replace with the replacement parts.

Replacing the O Rings

To replace the o rings, you will first need to remove the spout retaining screw (6) by using a 2.5mm allen key. You can then lift the spout (7) up and replace the o rings (8) at the base with the replacement parts.

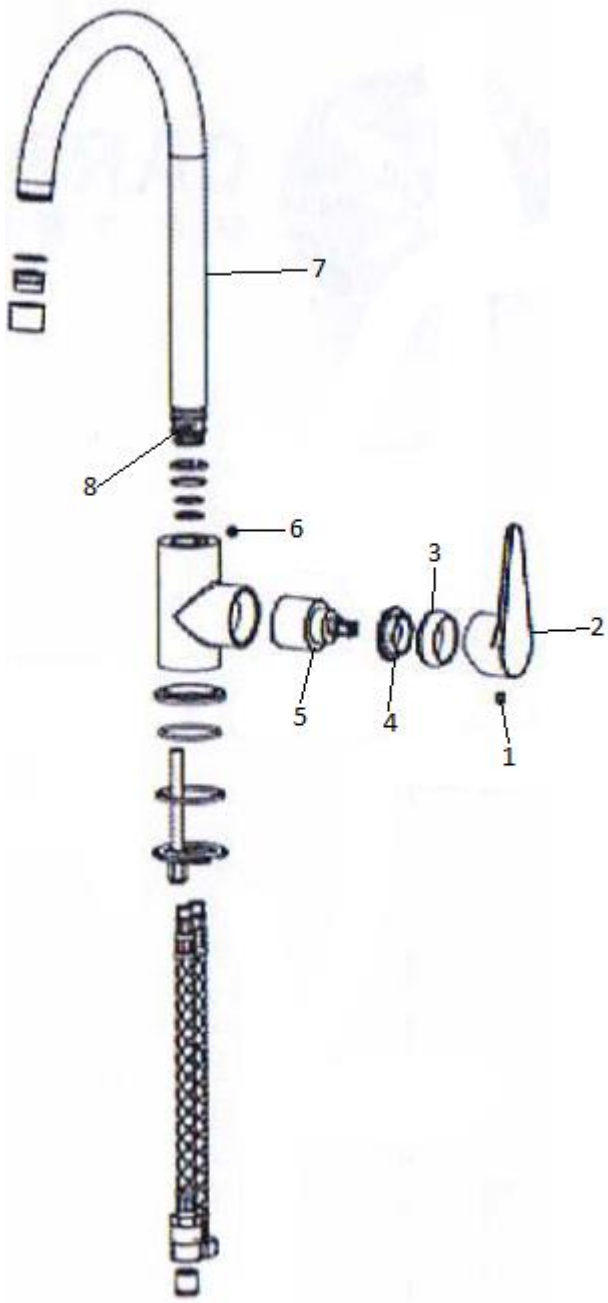

Central Services Ltd
Unit 17 Park Hall Business Village
Park Hall Road
Stoke-on-Trent
ST3 5XA

01782 599258
ks-ukcentralservices.gb@franke.com

CARRON PHOENIX